

Using your Simplicity™ Remote Receiver LRD

⚠ Safety Instructions

WARNING: Not to be used as a visual public mode alarm notification appliance.

1. Read and understand all instructions.
2. Follow all warnings and instructions on the *Simplicity*™ Remote Receiver LRD.
3. For indoor use only.
4. Unplug the Remote Receiver from the wall outlet and lamp before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use the Remote Receiver near water, for example, near a bathtub, in a wet basement, or near a swimming pool.
6. The Remote Receiver should be operated only from the type of power source indicated on the marking label.
7. Do not allow anything to rest on the power cord of the lamp plugged into the Remote Receiver. Do not locate the Remote Receiver where people can walk on the lamp cord.
8. Do not overload wall outlets and extension cords.
9. To reduce the risk of electrical shock, do not disassemble the Remote Receiver. Take it to a qualified service person when service or repair work is required. Opening the unit or incorrect re-assembly can expose you to dangerous voltages or other risks. The Remote Receiver does not have any user-serviceable parts.
10. Unplug the Remote Receiver from the wall outlet and refer servicing to qualified service personnel under the following conditions: (a) when the plug is damaged; (b) if liquid has been spilled into the Remote Receiver; (c) if the Remote Receiver has been exposed to rain or water; (d) if the Remote Receiver does not operate normally; (e) if the Remote Receiver has been dropped and/or damaged; (f) if the Remote Receiver exhibits a distinct change in performance.
11. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage.

FCC Information

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference with the radio and television reception. The signaller has been tested and found to comply with the specifications for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of the FCC Rules. These rules are designed to provide reasonable protection against radio frequency interference in residential installations.

There is no guarantee that interference will not occur during use. You can determine if this equipment causes interference to radio or television reception by turning the signaller on and off while the television or radio is on.

If this equipment does cause interference the user is encouraged to try to correct the interference by one or more of the following measures: (a) Reorient the radio or television receiving antenna; (b) Move the signaller further away from the radio or television; (c) Plug the signaller into a different outlet so it is on a different branch circuit than the television or radio; (d) If necessary, consult an experienced radio/television technician or the manufacturer for additional suggestions.

Ultratec shall repair or replace a defective product, at Ultratec's option, free of charge if returned to Ultratec, freight prepaid, within two years after the product has been shipped to Purchaser, provided, however, that Purchaser shall give Ultratec written notice within said time period of the fact of such defective product and shall also indicate in writing the nature of the defect upon returning the defective product to Ultratec.

This warranty covers defects in materials and workmanship only. It does not cover damage caused by accidents, defects, or damage resulting from misuse, abuse, or disregard for reasonable care, or damage caused by subjecting the product to unspecified electrical voltage or attaching inappropriate devices (including, but not limited to, damage caused by lightning and connecting the product to digital telephone systems).

Other than as stated herein, there are no other warranties, whether by sample or model, by description or quantity, whether expressed or implied, and there are no implied warranties or fitness for a particular purpose or of merchantability. This warranty shall be limited to the foregoing obligations of Ultratec and specifically excludes any incidental or consequential damages resulting from shipping charges. Because damage during shipment is not covered by this warranty, the product should be insured for shipment by the owner.

Ultratec shall repair or replace a defective product, at Ultratec's option, free of charge if returned to Ultratec, freight prepaid, within two years after the product has been shipped to Purchaser, provided, however, that Purchaser shall give Ultratec written notice within said time period of the fact of such defective product and shall also indicate in writing the nature of the defect upon returning the defective product to Ultratec.

This warranty covers defects in materials and workmanship only. It does not cover damage caused by accidents, defects, or damage resulting from misuse, abuse, or disregard for reasonable care, or damage caused by subjecting the product to unspecified electrical voltage or attaching inappropriate devices (including, but not limited to, damage caused by lightning and connecting the product to digital telephone systems).

Other than as stated herein, there are no other warranties, whether by sample or model, by description or quantity, whether expressed or implied, and there are no implied warranties or fitness for a particular purpose or of merchantability. This warranty shall be limited to the foregoing obligations of Ultratec and specifically excludes any incidental or consequential damages resulting from shipping charges. Because damage during shipment is not covered by this warranty, the product should be insured for shipment by the owner.

Warranty Terms

Two-Year Limited

Warranty

Ultratec, Inc. offers a two-

year warranty for the

Simplicity™ Remote Receiver

LRD. Warranty service is

available through Ultratec. If

your product needs service,

return it to:

Ultratec National Service Ctr.
5901 Research Park Blvd.

Madison, WI 53719




Setup

1. Plug the Remote Receiver into an electrical outlet.
2. Plug the signaler lamp into the Remote Receiver
3. Using the switch on the lamp, turn the lamp on.

The switch on the lamp must always remain on to signal sounds. If you want to turn the lamp on and off for other purposes such as reading, press the Remote Receiver **On/Off Switch**.

The Remote Receiver will flash the lamp when it detects signals that are transmitted from any *Simplicity* Signaler (see below).

 
If you have more than one *Simplicity* Signaler sending signals to the Remote Receiver LRD, the three lights on the front of the Receiver will tell you which one is signaling:

-  The light on the left (beneath the picture of a bell) is for the Doorbell Signaler.
-  The middle light (beneath the telephone symbol) signals the telephone.
-  The one on the right (beneath the ear symbol) works with the Sound Signaler.


When the receiver is flashing, each light stays on for six seconds. The lamp stops flashing after about one minute of continuous operation.

Simplicity™ System

Other units that work with the Remote Receiver:




Simplicity™
Doorbell Signaler LT or LTW

 

Simplicity™
Telephone Ring Signaler LT



 
Simplicity™
Telephone Ring Signaler LTD




Simplicity™ Sound Signaler T



 Simplicity™
Sound Signaler TD



Simplicity™
Telephone/Door Signaler LTW

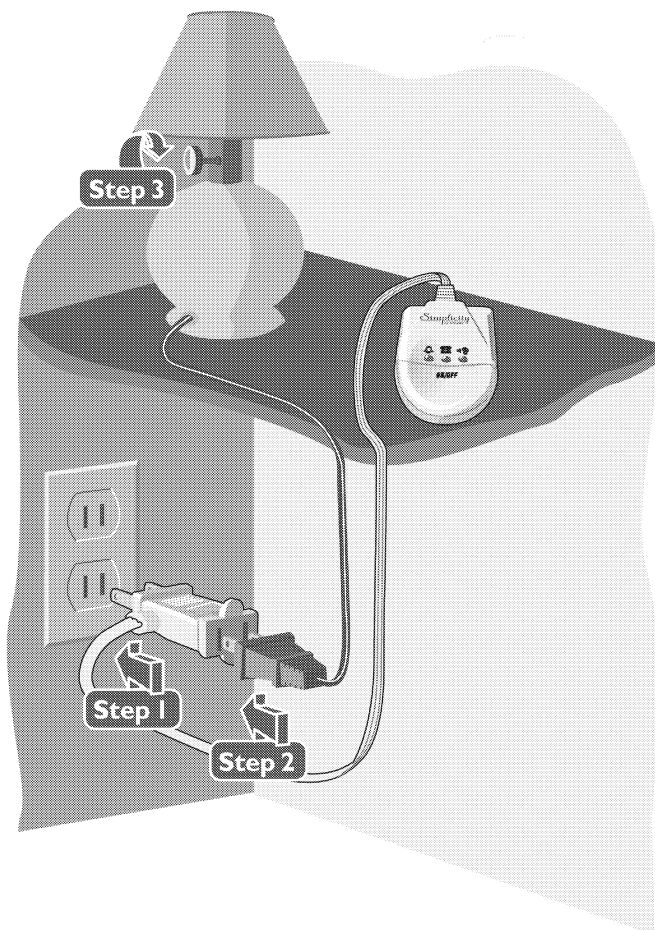 

Troubleshooting

Transmitting Problems

If the signal lamp does not flash when it should, check the following:

- If any of the red **Receive Lights** on the Remote Receiver does not blink when the lamp should be flashing, check the **Transmit Light** on the signaler that should be transmitting to the Receiver. If that light is not blinking, see the instructions for that unit.
- If the **Transmit Light** on the other signaler is blinking, then be sure the Remote Receiver is properly plugged into a working electrical outlet.
- Be sure that, if your electrical outlet is controlled by a wall switch, the switch is on.
- Do not plug the Remote Receiver into a power strip.
- Try a different outlet.
- If there is more than one *Simplicity* System operating in your building, they may interfere with each other.

Lamp Problems

If the red **Receive Lights** on the Remote Receiver blink, the Receiver is properly connected and the problem is with the lamp. Check the following:

- Be sure the lamp is plugged into the Remote Receiver.
- Be sure the lamp switch is on, and the lightbulb is working.

Specifications

Physical Dimensions

Size: 3.75 x 2.75 x 1.25 in.
Weight: 11 oz.

Connections

120 Volt AC Outlet
300 Watts maximum load

Controls

Lamp On/Off Switch

Approvals

Safety: CSA NRTL/C
both US and Canada